

SyncMaster 226NW




Install driver

Windows

Install programs

Natural Color

MagicTune™ MagicTune™

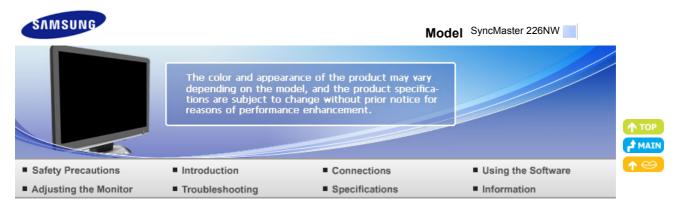

Safety Precautions

Notation Power Installation Cleaning and Use Others

Notation

Please read the following safety instructions as they are designed to prevent damage to property and harm to the user.

Warning / Caution



Failure to follow directions noted by this symbol could result in bodily harm or damage to the equipment.

Notational Conventions



Prohibited



Important to read and understand at all times



Do not disassemble



Disconnect the plug from the outlet



Do not touch



Ground to prevent an electric shock

Notation Power Installation Cleaning and Use Others

Power



When not used for extended period of time, set your computer to DPMS. If using a screen saver, set it to active screen mode.

The images here are for reference only, and are not applicable in all cases (or countries).

Shortcut to Anti-Afterimage Instructions




- Do not use a damaged or loose plug.
 - This may cause electric shock or fire.





- Do not pull the plug out by the wire nor touch the plug with wet hands.
 - ▶ This may cause electric shock or fire.



- Use only a properly grounded plug and receptacle.
 - An improper ground may cause electric shock or equipment damage. (Class I Equipment only.)



- Insert the power plug firmly so that it does not come loose.
 - A bad connection may cause fire.



- Do not bend the plug excessively and wire nor place heavy objects upon them, which could cause damage.
 - ▶ This may cause electric shock or fire.



- Do not connect too many extension cords or plugs to one outlet.
 - ▶ This may cause fire.



- Do not disconnect the power cord while using the monitor.
 - A surge may be caused by the separation and may damage the monitor.



- Do not use the power cord when the connector or plug is dusty.
 - If the connector or plug of the power cord is dusty, clean it with a dry cloth.
 - Using the power cord with a dusty plug or connector may cause an electric shock or fire.
- To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.



▶ This may cause electric shock or fire.

Notation

Power

Installation Cleaning and Use

Others

Installation



Be sure to contact an authorized Service Center, when installing your monitor in a location with heavy dust, high or low temperatures, high humidity, and exposed to chemical substances and where it operates for 24 hours such as at airports, train stations etc.

Failure to do so may cause serious damage to your monitor.




- Place your monitor in a location with low humidity and a minimum of dust.
 - ▶ Failure to do so may cause electric shock or fire inside the monitor.



- Do not drop the monitor when moving it.
 - ▶ This may cause damage to the product or the person carrying it.



- Install the monitor base in a showcase or shelf so that the end of the base does not protrude from the showcase or shelf.
 - ▶ Dropping the product may cause damage to the product or the person carrying it.



- Do not place the product on the floor.
 - ▶ Take care, as someone, specifically children may trip over it.



- Do not place the product on an unstable or small surface area.
 - Place the product on an even and stable surface, as the product may fall and cause harm to someone walking by, specifically children.



- TO PREVENT THE SPREAD OF FIRE, KEEP CANDLES OR OTHER OPEN FLAMES AWAY FROM THIS PRODUCT AT ALL TIMES.
 - Otherwise, this may cause fire.



- Keep any heating devices away from the power cable.
 - ▶ A melted coating may cause electric shock or fire.



- Do not install the product in places with poor ventilation, for instance, a bookshelf, closet, etc.
 - ▶ Any increase in the internal temperature may cause fire.




- Put down the monitor carefully.
 - Failing to do so may damage the monitor.



- Do not place the monitor face down.
 - ▶ This may damage the TFT-LCD surface.



- The installation of the bracket must be done by a qualified professional.
 - Installing the bracket by unqualified personnel may result in injury. Always use the mounting device specified in the owner's manual.



- When installing the product, make sure to keep it away from the wall (more than 10 cm/4 inches) for ventilation purposes.
 - Poor ventilation may cause an increase in the internal temperature of the product, resulting in a shortened component life and degraded performance.



- Do not disconnect the power cord while using the monitor.
 - A surge may be caused by the separation and may damage the monitor.



- Keep the plastic packaging (bag) out of children's reach.
 - ▶ The plastic packaging (bag) may cause suffocation if children play with it.

Cleaning and Use



When cleaning the monitor case or the surface of the TFT-LCD screen, wipe with a slightly moistened, soft fabric.



Do not spray water or detergent directly onto the monitor.

▶ This may cause damage, electric shock or fire.



Use the recommended detergent with a smooth cloth.



- If the connector between the plug and the pin is dusty or dirty, clean it properly using a dry cloth.
 - ▶ A dirty connector may cause electric shock or fire.



- Make sure to unplug the power cord before cleaning the product.
 - ▶ Otherwise, this may cause electric shock or fire.



- Unplug the power cord from the power outlet and wipe the product using a soft, dry
 - Do not use any chemicals such as wax, benzene, alcohol, thinners, insecticide, air freshener, lubricant or detergent.



- Contact the SAMSUNG customer care center or Customer Center for interior cleaning once a year.
 - Keep the product's interior clean. Dust which has accumulated in the interior over an extended period of time may cause a malfunction or fire.

Notation Power Installation Cleaning and Use Others



Do not remove the cover (or back).



This may cause electric shock or fire. Refer to a qualified servicing company.



If your monitor does not operate normally - in particular, if there is any unusual sound or smell coming from the monitor - unplug it immediately and the Service Center.

▶ This may cause electric shock or fire.



Keep the product away from places exposed to oil, smoke or moisture; do not install inside a vehicle.

This may cause a malfunction, electric shock or fire. In particular, avoid operating the monitor near water or outdoors where it could be exposed to snow or rain.



If the monitor is dropped or the casing is damaged, turn the monitor off and unplug the power cord. Then contact the Service Center.

▶ The monitor may malfunction, causing electric shock or fire.



- Disconnect the plug from the outlet during storms or lightning or if it is not used for a long period of time.
 - ▶ Failure to do so may cause electric shock or fire.



- Do not try to move the monitor by pulling only the wire or the signal cable.
 - ▶ This may cause a breakdown, electric shock or fire due to damage to the cable.



- Do not move the monitor right or left by pulling only the wire or the signal cable.
 - ▶ This may cause a breakdown, electric shock or fire due to damage to the cable.



- Do not cover the vents on the monitor cabinet.
 - ▶ Bad ventilation may cause a breakdown or fire.
- Do not place water containers, chemical products or small metal objects on the monitor.



▶ This may cause a malfunction, electric shock or fire. If a foreign substance enters the monitor, unplug the power cord and contact the Service Center.



- Keep the product away from combustible chemical sprays or inflammable substances.
- ▶ This may cause an explosion or fire.



- Never insert anything metallic into the monitor openings.
 - ▶ This may cause electric shock, fire or injury.



- Do not insert metal objects such as chopsticks, wire and tools or inflammable objects such as paper or matches into the vent, headphone port or AV ports or etc.
 - ▶ This may cause electric shock or fire.
 If an alien substances or water enters the product, turn the product off, unplug the power connector from the wall outlet and contact the Service Center.



- When viewing a fixed screen for an extended period of time, residual image or blurriness may appear.
 - ▶ Change the mode to energy saving mode or set a screensaver to a changing picture when away from the monitor for an extended period of time.



- Adjust the resolution and frequency to the level appropriate for the model.
 - An inappropriate resolution may cause undesirable picture quality.
 22 inch (56 cm) 1680 x 1050



Viewing the monitor continuously at a too close angle may result in damage to your eyesight.



- To ease eye strain, take at least a five-minute break after every hour of using the monitor.
- Do not install the product on an unstable, uneven surface or a location prone to vibrations.



Dropping the product may cause damage to the product or the person carrying it. Using the product in a location prone to vibrations may shorten the lifetime of the product or may cause the product to catch fire.



When moving the monitor, turn off and unplug the power cord. Make sure that all cables, including the antenna cable and cables connected to other devices, are disconnected before moving the monitor.

▶ Failure to disconnect cables may damage it and cause fire or electric shock.



- Place the product out of children's reach, as they could damage by hanging onto it.
 - A falling product may cause injury to the person or even fatality.



- When not using the product for an extended period of time, keep the product unplugged.
 - Otherwise, this may cause heat emission from the accumulated dirt or degraded insulation, causing electric shock or fire.



- Do not place your children's favorite toys or any other objects of interest on the product.
 - Children may try to climb on the product to retrieve an object. The product could fall, causing injury or even fatality.



- When lifting up or moving the monitor, do not lift the monitor upside down while holding only the stand.
 - This may cause your monitor to fall, and become damaged or cause personal injury.

Good Postures When Using the Monitor



- Try to maintain a good posture when using the monitor.
 - Keep your back straight.
 - Keep a distance of about 45 ~ 50 cm between your eyes and the monitor screen. Look at the screen from slightly above it, and have the monitor directly in front of you.
 - Tilt the monitor upwards by 10 ~20 degrees. Adjust the monitor height so that the top of the monitor is slightly below eye level.
 - Adjust the monitor angle so that there is no reflected light on the screen. Try to maintain your arms perpendicular to your armpits.
 - Keep your arms level with the back of your hands.
 - Keep the angle of the elbow perpendicular.
 - Keep the angle of the knees at more than 90 degree. Do not let your feet fall up from the floor. Adjust the arm position so that it is below the heart.




(Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

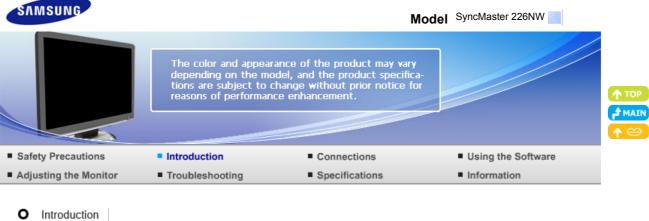

Features Package Contents Your Monitor

Features

- RTA Monitor
- RTA (Response Time Accelerator)

A function that accelerates the response speed of the panel so as to provide a sharper and more natural video display.

- RTA On Activates the RTA function so that the panel operates at a higher response speed than its original speed.
- ▶ RTA OFF Deactivates the RTA function so that the panel operates at its original response speed.

Features Package Contents Your Monitor

Package Contents

Please make sure the following items are included with your monitor. If any items are missing, contact your dealer. Contact a local dealer to buy optional items.

- Unpacking
 - Without Stand



Monitor



Monitor & Simple stand

Manual



Quick Setup Guide



Warranty Card (Not available in all locations)



User's Guide, Monitor Driver, Natural Color Software, MagicTune™ Software

Cable



Power Cord



D-sub Cable

Others



Cleaning Cloth

Features Package Contents Your Monitor

Your Monitor

Front



- MENU button [Ⅲ]
- Opens the on-screen menu and exits from the menu.
- ② MagicBright™ button [◄▲]

MagicBright™ is a new feature providing optimum viewing environment depending on the contents of the image you are watching. Currently seven different modes are available: Custom, Text, Internet, Game, Sport and Movie, Dynamic Contrast. Each mode has its own pre-configured brightness value. You can easily select one of seven settings by simply pressing MagicBright™ control button.

1) Custom

Although the values are carefully chosen by our engineers, the pre-configured values may not be comfortable to your eyes depending on your taste.

If this is the case, adjust the brightness and contrast by using the OSD menu.

2) Text

For documentations or works involving heavy text.

3) Internet

For working with a mixture of images such as texts and graphics.

4) Game

For watching motion pictures such as a game.

5) Sport

For watching motion pictures such as a sport.

6) Movie

For watching motion pictures such as a DVD or Video CD.

7) Dynamic Contrast

Dynamic Contrast is to automatically detect distribution of inputted visual signal and adjust to create optimum contrast.

>> Click here to see an animation clip

8 Brightness button []

When OSD is not on the screen, push the button to adjust brightness.

>> Click here to see an animation clip

2.3 Adjust buttons [▼/▲] Adjust items in the menu.

4 Enter button [☑] / Activates a highlighted menu item.

SOURCE button

*The [Source/Enter] button operates in [anal-

*The [Source/Enter] button operates in [analog] mode only and is only

used for selecting an OSD menu.

AUTO button
 Use this button for auto adjustment.
 Click here to see an animation clip

Open Bound (a) Description (b) Use this button for turning the monitor on and off.

Power indicator This light glows blue during normal operation, and blinking blue once

as the monitor saves your adjustments.

See PowerSaver described in the manual for further information regarding power saving functions. For energy conservation, turn your monitor OFF when it is not needed, or when leaving it unattended for long periods.

Rear



× The configuration at the back of the monitor may vary from product to product.

POWER port
 Connect the power cord for your monitor to the power port on the back of the monitor.

RGB IN port Connect the signal cable to the 15-pin, D-sub port on the back of your monitor.

S Kensington Lock The Kensington lock is a device used to physically fix the system when using it in a public place.

The locking device has to be purchased separately.
For using a locking device, contact where you purchase it.

See Connecting Cables for further information regarding cable connections.






O Connections

Connecting Cables Using the Stand

Connecting Cables

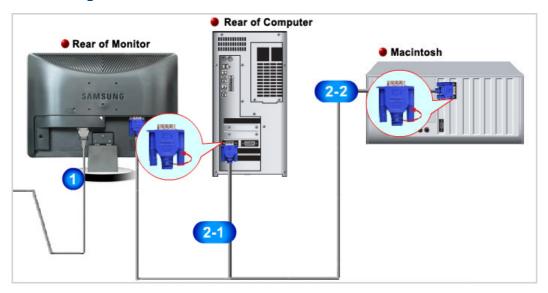

- Connect the power cord for your monitor to the power port on the back of the monitor. Plug the power cord for the monitor into a nearby outlet.
- 2 Use a connection appropriate for your computer.
 - 2-1 Using the D-sub (Analog) connector on the video card.
 - Connect the signal cable to the 15-pin, D-sub port on the back of your monitor.



- 2-2 Connected to a Macintosh.
 - -Connect the monitor to the Macintosh computer using the D-sub connection cable.
- * If the monitor and the computer are connected, you can turn them on and use them.

Connecting Cables Using the Stand

Using the Stand

Monitor Assembly



Monitor and Bottom

Attaching a Base

This monitor accepts a 100 mm x 100 mm VESA-compliant mounting interface pad.



↑ TOP

- A. Monitor
- B. Mounting interface pad (Sold separately)
- 1 Turn off your monitor and unplug its power cord.
- 2 Lay the LCD monitor face-down on a flat surface with a cushion beneath it to protect the screen.
- Remove three screws and then remove the stand from the LCD monitor.
- Align the mounting interface pad with the holes in the rear cover mounting Pad and secure it with four screws that came with the arm-type base, wall mount hanger or other base.



- Do not use screws longer than the standard dimension, as they may damage the inside of the Monitor
- For wall mounts that do not comply with VESA standard screw specifications, the length of the

- screws may differ depending on their specifications.
- Do not use screws that do not comply with the VESA standard screw specifications. Do not fasten the screws too tightly, as this may damage the product or cause the product to fall, leading to personal injury. Samsung is not liable for these kinds of accidents.
- Samsung is not liable for product damage or personal injury when a non-VESA or non-specified wall mount is used or the consumer fails to follow the product installation instructions.



- To mount the monitor on a wall, you should purchase the wall mounting kit that allows you to mount the monitor at least 10cm away from the wall surface.
- Contact the nearest Samsung Service Center for more information. Samsung Electronics will not be responsible for damages caused by using a base other than those specified.

 • Please use Wall Mount according to the International standards.



Using the Software

Monitor Driver Natural Color MagicTune™

Monitor Driver

When prompted by the operating system for the monitor driver, insert the CD-ROM included with this monitor. Driver installation is slightly different from one operating system to another. Follow the directions appropriate for the operating system you have.

Prepare a blank disk and download the driver program file at the Internet web site shown below.


Internet web site :http://www.samsung.com/ (Worldwide)

http://www.samsung.com/monitor (U.S.A)

http://www.sec.co.kr/monitor (Korea)

http://www.samsungmonitor.com.cn/ (China)

- Installing the Monitor Driver (Automatic)
 - 1 Insert the CD into the CD-ROM drive.
 - Olick "Windows".
 - Ochoose your monitor model in the model list, then click the "OK" button.

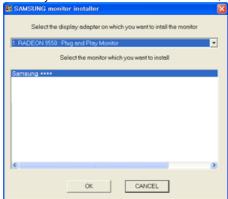

If you can see following message window, then click the "Continue Anyway" button. Then click the "OK" button (Microsoft[®] Windows[®] XP/2000 Operating System).



X This monitor driver is under certifying MS logo, and this installation doesn't damage your system

The certified driver will be posted on Samsung Monitor homepage

http://www.samsung.com/

- 6 Monitor driver installation is completed.
- Installing the Monitor Driver (Manual)

Windows Vista | Windows XP | Windows 2000 | Windows ME | Windows NT | Linux

- Microsoft® Windows Vista™ Operating System ▲
 - 1 Insert your Manual CD into your CD-ROM drive.
 - Olick (Start) and "Control Panel". Then, double-click on "Appearance and Personalization".





8 Click "Personalization" and then "Display Settings".






4 Click "Advanced Settings..."



6 Click "Properties" in the "Monitor" tab. If the "Properties" button is deactivated, it means the configuration for your monitor is completed. The monitor can be used as is. If the message "Windows needs..." is displayed, as shown in the figure below, click "Continue".

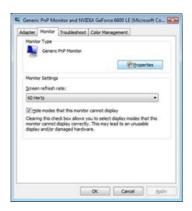




** This monitor driver is under certifying MS logo, and this installation doesn't damage your system.

The certified driver will be posted on Samsung Monitor homepage

http://www.samsung.com/

6 Click "Update Driver..." in the "Driver" tab.

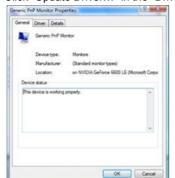




Ocheck the "Browse my computer for driver software" checkbox and click "Let me pick from a list of device drivers on my computer".





Olick "Have Disk..." and select the folder (for example, D:\Drive) where the driver setup file is located, and click "OK".



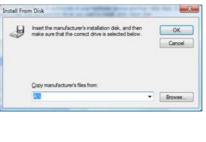


9



 $\textcircled{0} \ \text{Click "Close"} \rightarrow \text{"Close"} \rightarrow \text{"OK"} \rightarrow \text{"OK"} \ \text{on the following screens displayed in sequence}.$



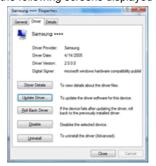







- Microsoft[®] Windows[®] XP Operating System
 - 1 Insert the CD into the CD-ROM drive.
 - ${f Q}$ Click "Start" ightarrow "Control Panel" then click the "Appearance and Themes" icon.




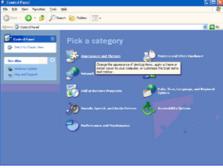


8

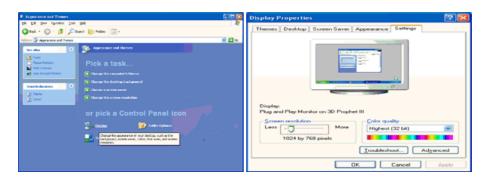

Olick the "Properties" button on the "Monitor" tab and select "Driver" tab.

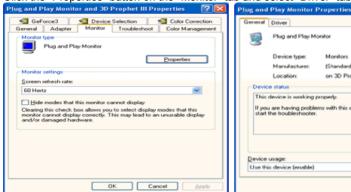

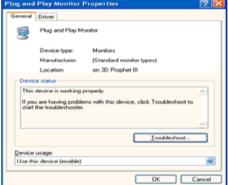


6 Click "Update Driver." and select "Install from a list or." then click the "Next" button.





6 Select "Don't search, I will." then click "Next" and then click "Have disk".

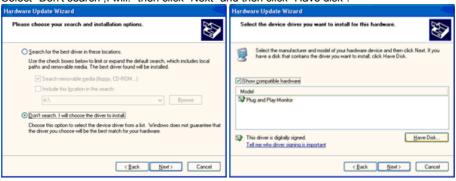

0



If you can see following "Message" window, then click the "Continue Anyway" button. Then click the "OK" button.




X This monitor driver is under certifying MS logo, and this installation doesn't damage your system.

The certified driver will be posted on Samsung Monitor homepage

http://www.samsung.com/

Olick the "Close" button then click the "OK" button continually.



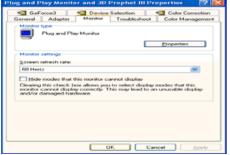

- Monitor driver installation is completed.
- Microsoft[®] Windows[®] 2000 Operating System
 - When you can see "Digital Signature Not Found" on your monitor, follow these steps.
 - 1 Choose the "OK" button on the "Insert disk" window.
 - 2 Click the "Browse" button on the "File Needed" window.
 - 6 Choose A:(D:\Driver) then click the "Open" button and then click the "OK" button.

How to install

- Olick "Start," "Setting," and then "Control Panel."
- Oouble click the "Display" icon.
- Select the "Settings" tab and click the "Advanced Properties" button.
- Ohoose "Monitor."
 - Case1 : If the "Properties" button is inactive, it means your monitor is properly configured. Please stop installation
 - Case2: If the "Properties" button is active, click the "Properties" button then follow next steps continually.
- 6 Click "Driver" and then click "Update Driver." then click the "Next" button.
- 6 Choose "Display a list of the known drivers for this device so that I can choose a specific driver" then click "Next" and then click "Have disk".
- Olick the "Browse" button then choose A:(D:\Driver).
- Olick the "Open" button, then click the "OK" button.
- Ohoose your monitor model and click the "Next" button then click "Next" button.
- Olick the "Finish" button then the "Close" button.

If you can see the "Digital Signature Not Found" window then click the "Yes" button. And click the "Finish" button then the "Close" button.

Microsoft[®] Windows[®] Millennium Operating System

- Olick "Start," "Setting," and then "Control Panel."
- Oouble click the "Display" icon.
- 8 Select the "Settings" tab and click the "Advanced Properties" button.
- 4 Select the "Monitor" tab.
- 6 Click the "Change" button in the "Monitor Type" area.
- 6 Choose "Specify the location of the driver."
- Choose "Display a list of all the driver in a specific location." then click the "Next" button.
- Olick the "Have Disk" button.
- Specify A:\(D:\driver) then click the "OK" button.
- O Select "Show all devices" and choose the monitor that corresponds to the one you connected to your computer and click "OK".
- Oontinue choosing "Close" button and "OK" button until you close the Display Properties dialogue box.

Microsoft[®] Windows[®] NT Operating System

- Oclick "Start," "Settings," "Control Panel," and then double-click "Display" icon.
- ② In the Display Registration Information window, click the Settings tab and then click "All Display Modes"
- Select a mode that you wish to use (Resolution, Number of colors and Vertical frequency) and then click "OK".
- 4 Click the "Apply" button if you see the screen working normally after clicking "Test". If the screen is not normal, change to a different mode (lower mode of resolution, colors, or frequency).
 - If there is no Mode at All Display Modes, select the level of resolution and vertical frequency by referring to the Preset Timing Modes in the user guide.

Linux Operating System <a>

To execute X-Window, you need to make the X86Config file, which is a type of system setting file.

- 1 Press "Enter" at the first and the second screen after executing the X86Config file.
- 2 The third screen is for setting your mouse.
- 8 Set a mouse for your computer.
- 4 The next screen is for selecting a keyboard.
- 6 Set a Keyboard for your computer.
- The next screen is for setting your monitor.
- First of all, set a horizontal frequency for your monitor. (You can enter the frequency directly.)
- 8 Set a vertical frequency for your monitor. (You can enter the frequency directly.)
- Inter the model name of your monitor. This information will not affect the actual execution of X-Window.
- You have finished setting up your monitor. Execute X-Window after setting other requested hardware.

Natural Color

Natural Color



One of the recent problems in using a computer is that the color of the images printed out by a printer or other images scanned by a scanner or a digital camera are not the same as those shown on the monitor.

the Natural Color S/W is the very solution for this problem. It is a color administration system developed by Samsung Electronics in association with Korea Electronics & Telecommunications Research Institute (ETRI).

This is only available for Samsung monitors and ensures that the color of the images on the monitor are the same as the printed or scanned images.

For more information, refer to Help (F1) in the software program.

□ Installing the Natural Color Software

Insert the CD included with the Samsung monitor into the CD-ROM Drive. The initial Natural Color screen will appear. Click on Natural Color in the startup window to install the Natural Color software. To install the program manually, insert the CD included with the Samsung monitor into the CD-ROM Drive, click the Windows [Start] button, select [Run...] .

Enter D:\Color\NCProSetup.exe and then press the <Enter> key.

(If the drive where the CD is inserted is not D:\, enter the applicable drive.)

■ Uninstalling the Natural Color Software Program

Select "Settings" / "Control Panel" from the "Start" menu and then double-click "Add/Delete a program"

Select Natural Color from the list and then click the "Add/Delete" button.

Monitor Driver Natural Color MagicTune™



.... Installation

- 1. Insert the installation CD into the CD-ROM drive.
- 2. Click the MagicTune™ installation file.
- Select installation Language, Click "Next".
- 4. When the Installation Shield Wizard window appears, click "Next."
- 5. Select "I agree to the terms of the license agreement" to accept the terms of use.
- 6. Choose a folder to install the MagicTune™ program.
- 7. Click "Install."
- The "Installation Status" window appears.

- 9. Click "Finish."
- 10. When the installation is complete, the MagicTune™ executable icon appears on your desktop.

Double-click the icon to start the program.



Installation Problems (MagicTune™)

The installation of MagicTune™ can be affected by such factors as the video card, motherboard and the network environment.

System Requirements

os

- Windows 2000
- Windows XP Home Edition
- Windows XP Professional
- Windows Vista™



Hardware

- 32MB Memory above
- 60MB Hard disk space above

.... Uninstall

The MagicTune™ program can be removed only by using the "Add or Remove Programs" option of the Windows® Control Panel.

Perform the following steps remove MagicTune ${}^{\text{TM}}$.

- 1. Go to [Task Tray] ' [Start] ' [Settings] and select [Control Panel] in the menu. If the program runs on Windows® XP, go to [Control Panel] in the [Start] menu.
- 2. Click the "Add or Remove Programs" icon in Control Panel.
- 3. In the "Add or Remove Programs" screen, scroll down to find "MagicTune™". Click on it to highlight it.
- 4. Click the "Change/Remove" button to remove the program.
- 5. Click "Yes" to begin the uninstall process.
- 6. Wait until the "Uninstall Complete" dialog box appears.

Visit the MagicTune™ website for technical support for MagicTune™, FAQs (questions and answers) and software upgrades.

^{*} For more information, visit the MagicTune™ website.



Adjusting the Monitor

Control Buttons Direct Functions OSD Function

Control Buttons





- ¶MENU / □ Opens the OSD menu. Also use to exit the OSD menu or return to the previous menu.
- ② [▼/▲] These buttons allow you to adjust items in the menu.
- [@] Press this button to activate a highlighted menu item.
- [AUTO] When the 'AUTO' button is pressed, the Auto Adjustment screen appears as shown in the animated screen on the center.

Control Buttons Direct Functions OSD Function

Direct Functions

AUTO





Menu Description

When the 'AUTO' button is pressed, the Auto Adjustment screen appears as shown in the animated screen on the center.

Auto adjustment allows the monitor to self-adjust to the incoming Analog signal. The values of fine, coarse and position are adjusted automatically. (Available in Analog mode only)

AUTO To make the automatic adjustment function sharper, execute the 'AUTO' function while the AUTO PATTERN is on.

- If auto adjustment does not work properly, press 'AUTO' button again to adjust picture with more accuracy.
- If you change resolution in the control panel, auto function will be executed automatically.
- OSD Locked & Unlock
 - When pressing the AUTO after locking the OSD





When pressing the MENU button after locking the OSD





Menu Description

This is the function that locks the OSD in order to keep the current states of settings or prevent others from adjusting the current settings.

Locked: Hold down the menu button for more than five (5) seconds to activate the OSD adjustment lock function.

OSD Locked & Unlock

 $\textbf{Unlock}: \mbox{Hold down the menu button for more than five (5) seconds to deactivate the OSD adjustment lock function.$

** Though the OSD adjustment lock function is activated, you can still adjust the brightness and contrast, and adjust MagicBright () using the Direct button



Menu Description


Push the MagicBright™ button to circle through available preconfigured modes.

 $\hbox{-} seven different modes (Custom/Text/Internet/Game/Sport/Movie/Dynamic Contrast)}\\$

Brightness

MagicBright™





Menu Description

Brightness When OSD is not on the screen, push the button to adjust brightness.

OSD Function

| | Picture | Brightness | Contrast | | | |
|-----|---------|-------------|-------------|---------------|--------------|--------------|
| 0 | Color | MagicColor | Color Tone | Color Control | Gamma | |
| 0 | Image | Coarse | Fine | Sharpness | H-Position | V-Position |
| | OSD | Language | H-Position | V-Position | Transparency | Display Time |
| 898 | Setup | Image Reset | Color Reset | RTA | | |

Information







| Menu | Description | Play/Stop |
|------------|---|-----------|
| | You can use the on-screen menus to change the brightness according to personal preference. | |
| Brightness | Direct Access Feature : When OSD is not on the screen, push the button to adjust brightness. >> Click here to see an animation clip | |
| | $MENU \to \boxdot \to \to \blacktriangle , \blacktriangledown \to MENU$ | |
| Contrast | You can use the on-screen menus to change the contrast according to personal preference. (Not available in MagicColor mode of Full and Intelligent.) | |
| | $MENU \to \biguplus \to \blacktriangle , \blacktriangledown \to \biguplus \to \blacktriangle , \blacktriangledown \to MENU$ | |







Menu Description Play/Stop MagicColor is a new technology that Samsung has exclusively developed to improve digital image and to display natural color more clearly without disturbing image quality. Off Returns to the original mode. MagicColor ② Demo The screen before applying MagicColor appears on the right and the screen after applying MagicColor appears on the left. 8 Full Displays not only vivid natural color but also more realistic natural skin color with clearness. Intelligent Displays vivid natural color with clearness. The tone of the color can be changed and one of four modes can be selected -Cool, Normal, Warm and Custom. Color Tone (Not available in MagicColor mode of Full and Intelligent.) $\mathsf{MENU} \to \blacktriangle\,,\, \blacktriangledown \to \clubsuit \to \blacktriangle\,,\, \blacktriangledown \to \clubsuit \to \blacktriangle\,,\, \blacktriangledown \to \mathsf{MENU}$ Adjusts individual Red, Green, Blue color balance. -Red, Green, Color Control (Not available in MagicColor mode of Full and Intelligent.) $\mathsf{MENU} \to \underline{\blacktriangle} \,, \, \overline{\blacktriangledown} \to \underline{\clubsuit} \to \underline{\blacktriangle} \,, \, \overline{\blacktriangledown} \to \underline{\clubsuit} \to \underline{\blacktriangle} \,, \, \overline{\blacktriangledown} \to \underline{\clubsuit} \to \underline{\blacktriangle} \,, \, \overline{\blacktriangledown} \to \mathsf{MENU}$ Gamma correction changes the luminance of the colors with intermediate luminance. - Mode 1 Gamma - Mode 2 - Mode 3 $\mathsf{MENU} \to \blacktriangle\,,\, \blacktriangledown \to \boxdot \to \blacktriangle\,,\, \blacktriangledown \to \bot \to \blacktriangle\,,\, \blacktriangledown \to \mathsf{MENU}$







| Menu | Description | Play/Stop |
|------------|---|-----------|
| Coarse | Removes noise such as vertical stripes. Coarse adjustment may move the screen image area. You may relocate it to the center using the horizontal control menu. MENU A, ADD ARM MENU | 99 |
| Fine | Removes noise such as horizontal stripes. If the noise persists even after fine tuning, repeat it after adjusting the frequency (clock speed). MENU | |
| Sharpness | Changes the clearance of image. (Not available in MagicColor mode of Full and Intelligent.) MENU → ▲ , ▼ → ← → ▲ , ▼ → ← → ▲ , ▼ → MENU | |
| H-Position | Changes the horizontal position of the monitor's entire display. $ MENU \to \blacktriangle , \blacktriangledown \to \clubsuit \to \blacktriangle , \blacktriangledown \to \clubsuit \to \blacktriangle , \blacktriangledown \to MENU $ | |
| V-Position | Changes the vertical position of the monitor's entire display. $ MENU \to \blacktriangle, \blacktriangledown \to \clubsuit \to \blacktriangle, \blacktriangledown \to \clubsuit, \blacktriangledown \to MENU $ | |







| Menu | Description | Play/Stop |
|--------------|--|-----------|
| Language | You can choose one of nine languages. • English, Deutsch, Español, Français, Italiano, Svenska, Русский, Português, Türkçe Ж The language chosen affects only the language of the OSD. It has no effect on any software running on the computer. | 90 |
| | $MENU \to \underline{\blacktriangle} \ , \overline{\blacktriangledown} \to \underbrace{\clubsuit} \to \underline{\clubsuit} \ , \overline{\blacktriangledown} \to MENU$ | |
| H-Position | You can change the horizontal position where the OSD menu appears on your monitor. MENU → ♠ . ▼ → ♥ → ♠ . ▼ → ♥ → ♠ . ▼ → MENU | |
| | | |
| V-Position | You can change the vertical position where the OSD menu appears on your monitor. MENU → ▲ . ▼ → 伊 → ▲ . ▼ → 伊 → ▲ . ▼ → MENU | |
| | $MENU \to A, \forall \to \textcircled{e} \to A, \forall \to \textcircled{e} \to A, \forall \to MENU$ | |
| Transparency | Change the transparency of the background of the OSD. MENU $\rightarrow \blacktriangle$, $\blacktriangledown \rightarrow \biguplus \rightarrow \blacktriangle$, $\blacktriangledown \rightarrow \biguplus \rightarrow \blacktriangle$, $\blacktriangledown \rightarrow \bmod$ MENU | |
| Display Time | The menu will be automatically turned off if no adjustments are made for a certain time period. You can set the amount of time the menu will wait before it is turned off. - 5 sec, 10 sec, 20 sec, 200 sec MENU → ▲, ▼ → ♣ → ★ , ▼ → ★ → MENU | |







| Menu | Description | Play/Stop |
|-------------|---|-----------|
| Image Reset | Image parameters are replaced with the factory default values. $ \texttt{MENU} \to \blacktriangle, \blacktriangledown \to \clubsuit \to \clubsuit, \to A, \blacktriangledown \to \texttt{MENU} $ | |
| Color Reset | Color parameters are replaced with the factory default values. $ \texttt{MENU} \to \blacktriangle, \blacktriangledown \to \clubsuit \to \blacktriangle, \blacktriangledown \to \clubsuit \to \blacktriangle, \blacktriangledown \to \texttt{MENU} $ | |
| RTA | RTA (Response Time Accelerator) A function that accelerates the response speed of the panel so as to provide a sharper and more natural video display. RTA On : Activates the RTA function so that the panel operates at a higher response speed than its original speed. RTA Off : Deactivates the RTA function so that the panel operates at its original response speed. | 9 |

🔼 🚺 Information 📥





Menu Description

MENU → ▲ , ▼





Troubleshooting

Check List Q & A Self-Test

Check List

Before calling for assistance, check the information in this section to see if you can remedy any problems yourself. If you do need assistance, please call the phone number on the Information section or contact your dealer

| Symptom | Check List | Solutions |
|--|---|---|
| No images on the screen. I cannot turn on the monitor. | Is the power cord connected properly? | Check the power cord connection and supply. |
| | Can you see "Check Signal Cable" on the screen? | (Connected using the D-sub cable) Check the signal cable connection. |
| | If the power is on, reboot the computer to see the initial screen(the login screen), which can be seen. | If the initial screen (the login screen) appears, boot the computer in the applicable mode (the safe mode for Windows ME/XP/2000) and then change the frequency of the video card. (Refer to the Preset Timing Modes) |
| | | If the initial screen (the login screen) does not appear, contact the Service Center or your dealer. |
| | Can you see "Not Optimum Mode", "Recommended Mode 1680 X 1050 60 Hz" on the screen? | You can see this message when the signal from the video card exceeds the maximum resolution and frequency that the monitor can handle properly. |
| | | Adjust the maximum resolution and frequency that the monitor can handle properly. |
| | | If the display exceeds SXGA or 75 Hz, a "Not Optimum Mode", "Recommended Mode 1680 X 1050 60 Hz" message is displayed. If the display exceeds 85 Hz, the display will work properly but the "Not Optimum Mode", "Recommended Mode 1680 X 1050 60 Hz" message appears for one minute and then disappears. Please change to the recommended mode during this one-minute period. (The message is displayed again if the system is rebooted.) |
| | There is no image on the screen. Is the power indicator on the monitor blinking at 1 second intervals? | The monitor is in PowerSaver mode. |
| | | Press a key on the keyboard to activate the monitor and restore the image on the screen. |
| | | If there is still no image, press the 'SOURCE/@' button. |

Then press any key on the keyboard again to activate the

monitor and restore the image on the screen.

| I cannot see the On Screen Display. | Have you locked the On Screen Display (OSD) Menu to prevent | Unlock the OSD by pressing the [MENU / Ⅲ] button for at least 5 seconds. | | |
|---|---|---|--|--|
| | changes? | | | |
| The screen shows | Is the screen displaying only one color as if looking at the screen through a cellophane paper? | Check the signal cable connection. | | |
| strange colors or just black and white. | | Make sure the video card is fully inserted in it's slot. | | |
| | Have the screen colors become strange after running a program or due to a crash between applications? | Reboot the computer. | | |
| | Has the video card been set properly? | Set the video card by referring to the video card manual. | | |
| The screen suddenly has become unbalanced. | Have you changed the video card or the driver? | Adjust screen image position and size using the OSD. | | |
| unbalanced. | Have you adjusted the resolution or frequency to the monitor? | Adjust the resolution and frequency at the video card. (Refer to the Preset Timing Modes). | | |
| | The screen can be unbalanced due to the cycle of the video card signals. Readjust Position by referring to the OSD. | | | |
| The screen is out of focus or OSD cannot be adjusted. | Have you adjusted the resolution or frequency on the monitor? | Adjust the resolution and frequency of the video card. (Refer to the Preset Timing Modes). | | |
| LED is blinking but no images on the screen. | Is the frequency properly adjusted when checking the Display Timing on the menu? | Adjust the frequency properly by referring to the video card manual and the Preset Timing Modes. (The maximum frequency per resolution may differ from product to product.) | | |
| There are only 16 colors shown on the screen. The screen colors have | Have the Windows colors been set properly? | Windows XP : Set the resolution at the Control Panel \rightarrow Appearance and Themes \rightarrow Display \rightarrow Settings. | | |
| changed after changing the video card. | | Windows ME/2000 : Set the resolution at the Control Panel \rightarrow Display \rightarrow Settings. | | |
| | Has the video card been set properly? | Set the video card by referring to the video card manual. | | |
| There is a message that reads "Unrecognized monitor, Plug & Play (VESA DDC) monitor found". | Have you installed the monitor driver? | Install the monitor driver according to the Driver Installation Instructions. | | |
| | See the video card manual to see if the Plug & Play (VESA DDC) function can be supported. | Install the monitor driver according to the Driver Installation Instructions. | | |
| Check when MagicTune™ does not function | MagicTune™ feature is found only on PC (VGA) with | * To check whether your PC is available for MagicTune™ feature, follow the steps below (When Windows is XP); | | |
| properly. | Window OS that supports Plug and Play. | Control Panel → Performance and Maintenance → System → Hardware → Device Manager → Monitors → After deleting Plug and Play monitor, find 'Plug and Play | | |

monitor' by searching new Hardware.

MagicTune $^{\mathbb{T}}$ is an additional software for the monitor. Some graphic cards may not support your monitor. When you have a problem with the graphic card, visit our website to check the compatible graphic card list provided.

http://www.samsung.com/monitor/magictune

MagicTune™ doesn't work properly.

Have you changed your PC or video graphic card?

Download the latest program. The program can be downloaded http://www.samsung.com/monitor/magictune

Did you install the program?

Reboot the computer after installing the program for the first time. If a copy of the program is already installed, remove it, reboot the computer, and then install the program again. You need to reboot the computer for it to operate normally after installing or removing the program.

∀ Visit the MagicTune™ website and download the installation software for MagicTune™ MAC.

- Check the following items if there is trouble with the monitor.
- Check if the power cord and the video cables are properly connected to the computer.
- Check if the computer beeps more than 3 times when booting. (If it does, request an a service for the main board of the computer.)
- If you installed a new video card or if you assembled the PC, check if the installed the adapter(video) driver and the monitor driver.
- Check if the scanning ratio of the video screen is set to between 56 Hz ~ 75 Hz. (Do not exceed 75 Hz when using the maximum resolution.)
- If you have problems in installing the adapter (video) driver, boot the computer in Safe Mode, remove the Display Adapter in the "Control Panel → System → Device Administrator" and then reboot the computer to reinstall the adapter (video) driver.
 - X If problems repeatedly occur, contact an authorized service center.

Check List Q & A Self-Test

Q & A

Question Answer

How can I change the frequency? The frequency can be changed by reconfiguring the

video card.

Note that video card support can vary, depending on

the version of the driver used.

(Refer to the computer or the video card manual for

details.)

How can I adjust the resolution? Windows XP:

Set the resolution in the Control Panel \rightarrow Appearance and Themes \rightarrow Display \rightarrow Settings.

Windows ME/2000:

Set the resolution in the Control Panel \rightarrow Display \rightarrow

Settinas.

X Contact the video card manufacturer for details.

How can I set the Power Saving function? Windows XP:

Set the resolution in the Control Panel → Appearance and Themes → Display → Screen

Saver.

Set the function in the BIOS-SETUP of the computer.

Windows ME/2000:

Set the resolution in the Control Panel \rightarrow Display \rightarrow Screen Saver.

Set the function in the BIOS-SETUP of the computer.

X Refer to the Windows/Computer Manual

How can I clean the outer case/LCD Panel?

Disconnect the power cord and then clean the monitor with a soft cloth, using either a cleaning solution or plain water.

Do not leave any detergent or scratches on the case. Do not let any water enter the monitor.

Check List Q & A Self-Test

Self-Test

Self-Test Feature Check | Warning Messages | Environment | Useful Tips

Your monitor provides a self test feature that allows you to check whether your monitor is functioning properly.

- Self-Test Feature Check
- 1 Turn off both your computer and the monitor.
- Unplug the video cable from the back of the computer.
- Turn on the monitor.

If the monitor is functioning properly, you will see a box in the illustration below.





This box appears during normal operation if the video cable becomes disconnected or damaged.

Turn off your monitor and reconnect the video cable; then turn on both your computer and the monitor.

If your monitor screen remains blank after using the previous procedure, check your video controller and computer system; your monitor is functioning properly.

Warning Messages





- Environment
- The location and the position of the monitor may influence the quality and other features of the monitor.

- If there are any sub woofer speakers near the monitor, unplug and relocate the woofer to another room
 - Remove all electronic devices such as radios, fans, clocks and telephones that are within 3 feet (one meter) of the monitor.

Useful Tips

- A monitor recreates visual signals received from the computer. Therefore, if there is a problem with the computer or the video card, this can cause the monitor to become blank, have poor coloring, become noisy, and video mode not supported, etc. In this case, first check the source of the problem, and then contact the Service Center or your dealer.
- Judging the monitor's working condition

If there is no image on the screen or a "Not Optimum Mode", "Recommended Mode 1680 X 1050 60 Hz" message comes up, disconnect the cable from the computer while the monitor is still powered on.

If there is a message coming up on the screen or if the screen goes white, this means the monitor is in working condition. In this case, check the computer for trouble.



Specifications

Specifications PowerSaver Preset Timing Modes

Specifications

General

Model Name SyncMaster 226NW

LCD Panel

Size 22 " Wide Diagonal (56 cm)

Display area 473.8 mm (H) x 296.1 mm (V)

Pixel Pitch 0.258 mm (H) x 0.258 mm (V)

Synchronization

Horizontal 30 ~ 81 kHz

Vertical 56 ~ 75 Hz

Display Color

16.7M Colors

Resolution

Optimum resolution 1680 X 1050@60 Hz

Maximum resolution 1680 X 1050@60 Hz

Input Signal, Terminated

RGB Analog, DVI Compliant Digital RGB, 0.7 Vp-p \pm 5%, TTL level (V high \geq 2.0V, V low \leq 0.8V)

Maximum Pixel Clock

146 MHz (Analog, Digital)

Power Supply

AC 100 - 240V~ (+/- 10%), 50/60Hz ± 3 Hz

Signal Cable

15pin to 15pin D-sub cable, Detachable DVI-D to DVI-D connector, Detachable (Option)

Dimensions (W x H x D) / Weight

514.6 X 353.3 X 63.0 mm / 20.2 x 13.9 x 2.4 inch (Without Stand) 514.6 X 422.0 X 219.3 mm / 20.2 x 16.6 x 8.6 inch (With Stand) / 5.7 kg / 12.5 lbs

VESA Mounting Interface

100 mm x 100 mm (for use with Specialty(Arm) Mounting hardware.)

Environmental considerations

Temperature : 50 °F ~ 104 °F (10 °C ~ 40 °C) Operating

Humidity: 10 % ~ 80 %, non-condensing

Temperature : -4 °F ~113 °F (-20 °C ~ 45 °C) Humidity : 5 % ~ 95 %, non-condensing Storage

Plug and Play Capability

This monitor can be installed on any Plug & Play compatible system. The interaction of the monitor and the computer systems will provide the best operating conditions and monitor settings. In most cases, the monitor installation will proceed automatically, unless the user wishes to select alternate settings.

Dot Acceptable

TFT LCD panels manufactured by using advanced semiconductor technology with precision of 1ppm (one millionth) above are used for this product. But the pixels of RED, GREEN, BLUE and WHITE color appear to be bright sometimes or some black pixels may be seen. This is not from bad quality and you can use it without any problelms.

For example, the number of TFT LCD sub pixels contained in this product are 5,292,000.

 $\,\,^{\times}\,$ Design and specifications are subject to change without prior notice.

- Class B Equipment (Information Communication equipment for residential use)
- This product complies with the Electromagnetic Compatibility Directives for residential use and can be used in all areas including common residential areas.

(Class B equipment emits less electromagnetic waves than Class A equipment.)

Specifications PowerSaver Preset Timing Modes

PowerSaver

This monitor has a built-in power management system called PowerSaver. This system saves energy by switching your monitor to low-power mode when it has not been used for a certain amount of time. The monitor automatically returns to normal operation when you press a key on the keyboard. For energy conservation, turn your monitor OFF when it is not needed, or when leaving it unattended for long periods. The PowerSaver system operates with a VESA DPMS compliant video card installed in your computer. Use the software utility installed on your computer to set up this feature.

| State | Normal Operation | Power saving mode | Power off (Power button) EPA/ENERGY 2000 |
|-------------------|------------------|-----------------------------|--|
| Power Indicator | Blue | Blue, Blinking | Black |
| Power Consumption | Less than 55 W | Less than 1 W (Off-mode) | Less than 1 W |



This monitor is EPA ENERGY STAR $^{\circledR}$ compliant and ENERGY2000 compliant when used with a computer equipped with VESA DPMS functionality.

As an ENERGY STAR® Partner, SAMSUNG has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

Specifications PowerSaver Preset Timing Modes

Preset Timing Modes

If the signal transferred from the computer is the same as the following Preset Timing Modes, the screen will be adjusted automatically. However, if the signal differs, the screen may go blank while the power LED is on. Refer to the video card manual and adjust the screen as follows.

Preset Timing Modes

| Display Mode | Horizontal Frequency (kHz) | Vertical Frequency (Hz) | Pixel Clock (MHz) | Sync Polarity (H/V) |
|-------------------|----------------------------------|-------------------------------|----------------------|------------------------|
| IBM, 640 x 350 | 31,469 | 70,086 | 25,175 | +/- |
| IBM, 640 x 480 | 31,469 | 59,940 | 25,175 | -/- |
| IBM, 720 x 400 | 31,469 | 70,087 | 28,322 | -/+ |
| MAC, 640 x 480 | 35,000 | 66,667 | 30,240 | -/- |
| MAC, 832 x 624 | 49,726 | 74,551 | 57,284 | -/- |
| MAC, 1152 x 870 | 68,681 | 75,062 | 100,000 | -/- |
| VESA, 640 x 480 | 37,500 | 75,000 | 31,500 | -/- |
| VESA, 640 x 480 | 37,861 | 72,809 | 31,500 | -/- |
| VESA, 800 x 600 | 35,156 | 56,250 | 36,000 | +/+ |
| VESA, 800 x 600 | 37,879 | 60,317 | 40,000 | +/+ |
| VESA, 800 x 600 | 46,875 | 75,000 | 49,500 | +/+ |
| VESA, 800 x 600 | 48,077 | 72,188 | 50,000 | +/+ |
| VESA, 1024 x 768 | 48,363 | 60,004 | 65,000 | -/- |
| VESA, 1024 x 768 | 56,476 | 70,069 | 75,000 | -/- |
| VESA, 1024 x 768 | 60,023 | 75,029 | 78,750 | +/+ |
| VESA, 1152 x 864 | 67,500 | 75,000 | 108,000 | +/+ |
| VESA,1280 x 960 | 60,000 | 60,000 | 108,000 | +/+ |
| VESA,1280 x 1024 | 79,976 | 75,025 | 135,000 | +/+ |
| VESA, 1680 X 1050 | 65,290 | 59,954 | 146,250 | -/+ |



The time to scan one line connecting the right edge to the left edge of the screen horizontally is called the Horizontal Cycle and the inverse number of the Horizontal Cycle is called the Horizontal Frequency. Unit: kHz

Vertical Frequency

Like a fluorescent lamp, the screen has to repeat the same image many times per second to display an image to the user. The frequency of this repetition is called the Vertical Frequency or Refresh Rate. Unit: Hz



O Information

Contact SAMSUNG WORLDWIDE Terms For Better Display Authority

■ Contact SAMSUNG WORLDWIDE

 $\,\,$ If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

| North America | | |
|----------------------|--------------------------|------------------------------|
| U.S.A | 1-800-SAMSUNG (7267864) | http://www.samsung.com |
| CANADA | 1-800-SAMSUNG (7267864) | http://www.samsung.com/ca |
| MEXICO | 01-800-SAMSUNG (7267864) | http://www.samsung.com/mx |
| Latin America | | |
| ARGENTINE | 0800-333-3733 | http://www.samsung.com/ar |
| BRAZIL | 4004-0000 | http://www.samsung.com/br |
| CHILE | 800-726-7864 (SAMSUNG) | http://www.samsung.com/cl |
| COLOMBIA | 01-8000112112 | http://www.samsung.com.co |
| COSTA RICA | 0-800-507-7267 | http://www.samsung.com/latin |
| ECUADOR | 1-800-10-7267 | http://www.samsung.com/latin |
| EL SALVADOR | 800-6225 | http://www.samsung.com/latin |
| GUATEMALA | 1-800-299-0013 | http://www.samsung.com/latin |
| JAMAICA | 1-800-234-7267 | http://www.samsung.com/latin |
| PANAMA | 800-7267 | http://www.samsung.com/latin |
| PUERTO RICO | 1-800-682-3180 | http://www.samsung.com/latin |
| REP. DOMINICA | 1-800-751-2676 | http://www.samsung.com/latin |
| TRINIDAD & TOBAGO | 1-800-7267-864 | http://www.samsung.com/latin |
| VENEZUELA | 0-800-100-5303 | http://www.samsung.com/latin |
| Europe | | |

| BELGIUM | 02 201 2418 | http://www.samsung.com/be |
|---------------------|---|------------------------------|
| CZECH REPUBLIC | 844 000 844 | http://www.samsung.com/cz |
| | Distributor pro Českou republiku: Samsung Zrt., česka organizační složka | Vyskočilova 4, 14000 Praha 4 |
| DENMARK | 70 70 19 70 | http://www.samsung.com/dk |
| FINLAND | 030-6227 515 | http://www.samsung.com/fi |
| FRANCE | 3260 SAMSUNG(7267864) (€ 0,15/min) | http://www.samsung.com/fr |
| GERMANY | 01805 - 121213 (€ 0,14/Min) | http://www.samsung.de |
| HUNGARY | 06-80-SAMSUNG (7267864) | http://www.samsung.com/hu |
| ITALIA | 800 SAMSUNG (7267864) | http://www.samsung.com/it |
| LUXEMBURG | 0032 (0)2 201 24 18 | http://www.samsung.lu |
| NETHERLANDS | 0900 20 200 88 (€ 0,10/Min) | http://www.samsung.com/nl |
| NORWAY | 815-56 480 | http://www.samsung.com/no |
| POLAND | 0 801 801 881 | http://www.samsung.com/pl |
| PORTUGAL | 80 8 200 128 | http://www.samsung.com/pt |
| REPUBLIC OF IRELAND | 0818 717 100 | http://www.samsung.com/uk |
| SLOVAKIA | 0800-SAMSUNG (7267864) | http://www.samsung.com/sk |
| SPAIN | 902 10 11 30 | http://www.samsung.com/es |
| SWEDEN | 0771-400 200 | http://www.samsung.com/se |
| SWITZERLAND | 0800-7267864 | http://www.samsung.com/ch |
| U.K | 0870 SAMSUNG (7267864) | http://www.samsung.com/uk |
| CIS | | |
| ESTONIA | 800-7267 | http://www.samsung.ee |
| LATVIA | 800-7267 | http://www.samsung.com/lv |
| LITHUANIA | 8-800-77777 | http://www.samsung.lt |
| KAZAKHSTAN | 8 800 080 1188 | http://www.samsung.kz |
| RUSSIA | 8-800-200-0400 | http://www.samsung.ru |
| UKRAINE | 8-800-502-0000 | http://www.samsung.com/ur |
| UZBEKISTAN | 140-1234 | http://www.samsung.uz |
| Asia Pacific | | |
| AUSTRALIA | 1300 362 603 | http://www.samsung.com/au |
| CHINA | 800-810-5858, 010- 6475 1880 | http://www.samsung.com.cn |
| HONG KONG | 3698-4698 | http://www.samsung.com/hk |

| INDIA | 3030 8282, 1800 1100 11 | http://www.samsung.com/in |
|----------------------|-----------------------------------|----------------------------|
| INDONESIA | 0800-112-8888 | http://www.samsung.com/id |
| JAPAN | 0120-327-527 | http://www.samsung.com/jp |
| MALAYSIA | 1800-88-9999 | http://www.samsung.com/my |
| PHILIPPINES | 1800-10-SAMSUNG (7267864) | http://www.samsung.com/ph |
| SINGAPORE | 1800-SAMSUNG (7267864) | http://www.samsung.com/sg |
| THAILAND | 1800-29-3232, 02-689-3232 | http://www.samsung.com/th |
| TAIWAN | 0800-329-999 | http://www.samsung.com/tw |
| VIETNAM | 1 800 588 889 | http://www.samsung.com/vn |
| Middle East & Africa | | |
| SOUTH AFRICA | 0860 7267864 (SAMSUNG) | http://www.samsung.com/za |
| U.A.E | 800SAMSUNG (7267864) 8000-4726 | http://www.samsung.com/mea |

Contact SAMSUNG WORLDWIDE Terms For Better Display Authority

Terms

Dot Pitch

The image on a monitor is composed of red, green and blue dots. The closer the dots, the higher the resolution. The distance between two dots of the same color is called the 'Dot Pitch'. Unit: mm

Vertical Frequency

The screen must be redrawn several times per second in order to create and display an image for the user. The frequency of this repetition per second is called the Vertical Frequency or Refresh Rate.

Example: If the same light repeats itself 60 times per second, this is regarded as 60 Hz.

Horizontal Frequency

The time to scan one line connecting the right edge to the left edge of the screen horizontally is called the Horizontal Cycle. The inverse number of the Horizontal Cycle is called Horizontal Frequency. Unit: kHz

■ Interlace and Non-Interlace Methods

Showing the horizontal lines of the screen from the top to the bottom sequentially is called the Non-Interlace method while showing odd lines and then even lines in turn is called the Interlace method. The Non-Interlace method is used for the majority of monitors to ensure a clear image. The Interlace method is the same as that used in TVs.

Plug & Play

This is a function that provides the best quality screen for the user by allowing the computer and the monitor to exchange information automatically. This monitor follows the international standard VESA DDC for the Plug & Play function.

Resolution

The number of horizontal and vertical dots used to compose the screen image is called the 'resolution'. This number shows the accuracy of the display. A high resolution is good for performing multiple tasks as more image information can be shown on the screen.

Example :If the resolution is 1680 X 1050 , this means the screen is composed of 1680 horizontal dots (horizontal resolution) and 1050 vertical lines (vertical resolution).

Contact SAMSUNG WORLDWIDE Terms For Better Display Authority

For Better Display

- Adjust computer resolution and screen injection rate (refresh rate) oncomputer as described below to enjoy the best quality of picture. You can have an uneven quality of picture in the screen if the best quality of picture is not provided in TFT-LCD.
 - Resolution: 1680 X 1050
 - Vertical frequency (refresh rate): 60 Hz
- TFT LCD panel manufactured by using advanced semiconductor technology with precision of 1ppm (one millionth) above is used for this product. But the pixels of RED, GREEN, BLUE and WHITE color seem to be bright sometimes or some of black pixels could be seen.

 This is not from bad quality and you can use it without uneasiness.
 - ▶ For example, the number of TFT LCD sub pixels that is contained in this product are 5,292,000.
- When cleaning the monitor and the panel outside, please apply the recommended small amount of cleaner by using a soft cloth to polish. Do not force the LCD area but rub softly. If excessive force is applied, you may stain it.
- If you are not satisfied with the picture quality, you can get better quality of picture by performing the "auto adjustment function" in display screen that is appeared as window termination button is pressed.
 - If there's still noise after the automatic adjustment, use the FINE/COARSE adjustment function.
- If you view a fixed screen for an extended period of time, residual image or blurriness may appear. Change the mode to energy save or set a screensaver to moving picture when you need to be away from the monitor for an extended period of time.

Contact SAMSUNG WORLDWIDE Terms For Better Display Authority

Authority

- ☑ Information in this document is subject to change without notice.
 ⊚ 2007 Samsung Electronics Co., Ltd. All rights reserved.
- Reproduction in any manner whatsoever without the written permission of Samsung Electronics Co., Ltd. is strictly forbidden.

Samsung Electronics Co., Ltd. shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Samsung is the registered trademark of Samsung Electronics Co., Ltd.; Microsoft, Windows and Windows NT are registered trademarks of Microsoft Corporation; VESA, DPMS and DDC are registered trademarks of Video Electronics Standard Association; the ENERGY STAR® name and logo are registered trademarks of the U.S. Environmental Protection Agency (EPA). As an ENERGY STAR® Partner, Samsung Electronics Co., Ltd. has determined that this product meets the ENERGY STAR® guidelines for energy efficiency. All other product names mentioned herein may be the trademarks or registered trademarks of their respective owners.



MÉXICO

IMPORTADO POR:

SAMSUNG ELECTRONICS MÉXICO. S.A. de C.V. Vía Lopez Portillo No. 6, Col. San Fco. Chilpan Tultitlán, Estado de México, C.P. 54940 Tel: 01-55-5747-5100 / 01-800-726-7864

EXPORTADO POR:

Samsung Electronics CO.,LTD. 416, Mae tan-3dong, Yeongtong - gu, Suwon City, Gyeonggi-do Korea

PRODUCT INFORMATION (Image Retention Free)

LCD Monitors and TVs may have image retention when switching from one image to another especially after displaying a stationary image for a long time.

This guide is to demonstrate correct usage of LCD products in order to protect them from Image retention.

Warranty

Warranty does not cover any damage caused by image retention. Burn-in is not covered by the warranty.

What is Image retention ?

During normal operation of a LCD panel, pixel image retention doesn't occur. However, if the same image is displayed for a long time, a slight difference in electric charge accumulates between the two electrodes which encase the liquid crystal. This may cause the liquid crystal to build up in a certain areas of the display. Thus, the previous image is retained when switching to a new video image. All display products, including LCD, are subject to image retention. This is not a product defect.

Please follow the suggestions below to protect your LCD from image retention


Power Off, Screen Saver, or Power Save Mode Ex)

- Turn the power off when using a stationary pattern.
 - Turn the power off for 4 hours after 24 hours in use
 - Turn the power off for 2 hours after 12 hours in use
- · Use a Screen saver if possible
 - Screen saver in one color or a moving image is recommended.
- Set the Monitor to power off with the PC Display Properties Power Scheme.

Suggestions for specific applications

Ex) Airports, Transit Stations, Stock Markets, Banks, and Controlling Systems We recommend that you follow set up of your display system program as below:

- Display Information together with Logo or Moving image cycle.
 Ex) Cycle: Display Information for 1 hour followed by a Display Logo or moving image for 1 minute.
- Change the Color Information periodically (Use 2 different colors). Ex) Rotate the Color Information with 2 colors every 30 minutes.



Avoid using a combination of characters and background color with large difference in luminance.

Avoid using Grey colors, which can cause Image retention easily.

Avoid: Colors with big difference in luminance (Black & White, Grey)
 Ex)

SYSTEM: 245
STATUS: NG
STATUS: NG

Recommended settings: Bright colors with little difference in luminance
 Change the characters color and background color every 30 minutes
 Ex)

SYSTEM: 245
STATUS: OK SYSTEM: 245
STATUS: OK STATUS: OK SYSTEM: 245
STATUS: OK

- Every 30 minutes, change the characters with movement.




The best way to protect your monitor from Image retention is to set your PC or System to operate a Screen Saver program when you are not using it.

Image retention may not occur when a LCD panel is operated under normal conditions.

Normal conditions are defined as continuously changing video patterns. When the LCD panel is operated for a long time with a fixed pattern (-over 12 hours-), there may be slight difference in voltage between electrodes that work the liquid crystal (LC) in a pixel. The voltage difference between electrodes increases with time, forcing the liquid crystal to lean. When this occurs, the previous image may be seen when the pattern is changed.

To prevent this, the accumulated voltage difference must be decreased.

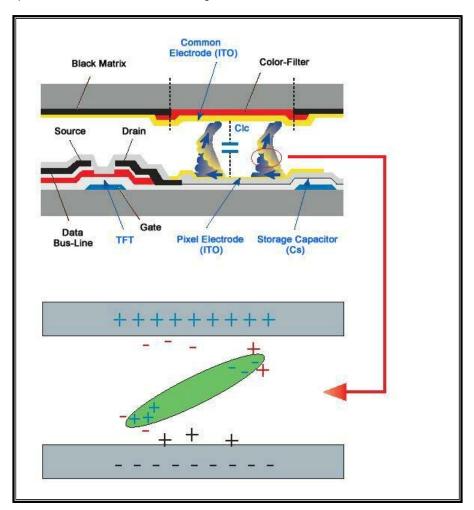

Our LCD Monitor satisfies ISO13406-2 Pixel fault Class II